

FRONT WHEEL ADJUSTMENT

If your trolley tends to veer slightly to the left or right, the front wheel can be adjusted. We recommend that you adjust the front wheel and test the results on flat ground with an evenly weighted bag.



MAINTENANCE

Be sure to mail in your Scout Registration Card. Clean your Scout with a damp cloth. Disconnect the battery from your Scout when it's not in use.

SERVICE

Do not use your Scout if any of the cables or electrical connections are damaged. If you are concerned about the performance of your Scout, battery, or charger, please call 888-682-7757.

Hill Billy USA
2907 Palma Drive Ventura, CA 93003
golf@hillbillyusa.com
888-682-7757



HILLBILLYUSA.COM

For helpful tips and how-to videos visit:
@hillbillyusa on YouTube

SCOUT INSTRUCTIONS

Follow these easy steps to get your Scout electric trolley ready for the golf course.

UNFOLD THE SCOUT

1. Release the frame clasp. Lift the center folding bracket and place it on the frame clasp.



2. Lift the upper handle assembly.



3. Open clasp and lock into the center folding bracket.



4. Lower the bag holders.




CHARGE THE BATTERY

Charge your battery before first use. The battery needs to be recharged after each round of golf.

FIT THE BATTERY

Lay the battery flat in the tray with the wires facing either the left or right wheel. Attach the connector to the trolley, matching red-to-red and black-to-black. The trolley is now ready for your golf bag.

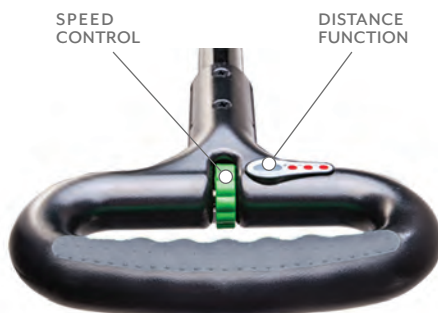

ON THE COURSE

There are two sets of controls. The rotating switch in the center of the handle is the Speed Control. Rotate this switch forward to move the trolley forward. The farther you roll the Speed Control, the faster the trolley will travel.

The second control is the Distance Function. Note there are three lights labeled with the numbers 10, 20, and 30. Press the large button once, and the Scout will travel 10 meters. Press the button twice for 20 meters and three times for 30 meters. The distances are approximate, and the distance traveled will vary depending on the ground conditions and the weight of your bag. When using the distance function, ensure the route is flat, safe, and clear, remembering that the trolley may continue to free-wheel.